

Table of Contents

Introduction.....	1
Topics Covered	1
Topics Not Covered	2
What's New in Pro/ENGINEER Wildfire 5.0.....	2
Fundamental Changes in Pro/ENGINEER Wildfire 5.0	3
Textbook Conventions	4
Tutorials.....	4
User Interface Changes	5
Introduction.....	5
UI Theme and Background Color	6
Menu Manager Position	7
The File Menu	8
The Popup Viewer.....	9
Crash Recovery	10
The Edit Menu	11
File Properties	12
Tutorial – File Properties	14
The View Menu	16
Tutorial – Realtime Rendering	17
The Insert Menu	18
The Analysis Menu.....	19
The Info Menu	20
Tutorial – File History	20
The Tools Menu	21
Appearances	22
Tutorial – Appearances	25
Import Profiles	30
Tutorial – Import Profiles	31
Import Log Files	32
Tutorial – Import Log Files	33
Connections	34
Model Tree	35
Help Center	35
Sketcher Enhancements.....	36
Introduction.....	36
Sketcher Tools Toolbar	37
Sketcher Constraints.....	38
Tutorial – Sketcher Constraints.....	40
Sketcher Dimensions	41
Tutorial – Sketcher Dimensions	43
Centerlines	45
Sketcher Points	46

Tutorial – Sketcher Centerlines and Points.....	47
Sketcher Coordinate System	48
Tutorial – Sketcher Coordinate System	49
Ellipse.....	50
Tutorial – Ellipse.....	50
Slant Rectangle and Parallelogram	51
Tutorial – Slant Rectangle and Parallelogram	51
Chamfer.....	53
Tutorial – Sketcher Chamfer	53
Thicken (Offset Both Sides).....	54
Tutorial – Thicken.....	55
Sketch Options and Sketch References	56
Tutorial – Sketch Options and Sketch References	56
Move & Resize	57
Tutorial – Move & Resize	58
Entity Locks	59
Tutorial – Entity Locks.....	60
General Modeling Enhancements.....	61
Introduction.....	61
Combined Views – Part Models	63
Tutorial – Combined Views – Part Models	64
Datum Features	66
Tutorial – Datum Features	67
Designated Area	68
Tutorial – Designated Area	69
Draft Analysis	73
Tutorial – Draft Analysis	74
Draft Feature	75
Tutorial – Draft Feature	76
Dynamic Edit.....	77
Tutorial – Dynamic Edit	78
Failure Resolution – Part Models	80
Tutorial – Failure Resolution – Part Models.....	82
Regeneration Manager – Part Models	83
Tutorial – Regeneration Manager – Part Models	84
Hole Feature	85
Tutorial – Hole Feature	86
Inheritance Feature	87
Insert Mode	88
Tutorial – Insert Mode	88
Layer States	89
Tutorial – Layer States	90
Mirror Features.....	91
Tutorial – Mirror Features.....	91
Parameters.....	92
Tutorial – Parameters.....	93
Patterns	94
Tutorial – Patterns	96
Geometry Pattern	98
Tutorial – Geometry Pattern.....	99
Round Feature	102

Tutorial – Round Feature	103
Surface Merge	106
Tutorial – Surface Merge	106
Surface Knots Analysis	107
Tutorial – Surface Knots Analysis	107
Surface Offset	108
Tutorial – Surface Offset	109
Toroidal Bend	110
Tutorial – Toroidal Bend	111
Trajectory Rib	112
Tutorial – Trajectory Rib	114
User Defined Features	117
Tutorial – User Defined Features	119
View Manager	121
Tutorial – View Manager	121
Volume Analysis	122
Tutorial – Volume Analysis	122
Warp Feature	124
Annotation Features	125
Introduction	125
Align Dimensions	126
Tutorial – Align Dimensions	126
Angle Dimensions	127
Tutorial – Angle Dimensions	127
Annotation Orientation	128
Tutorial – Annotation Orientation	128
Cross Section Edges	130
Tutorial – Cross Section Edges	130
Datum Targets	131
Tutorial – Datum Targets	131
Designated Areas	133
Tutorial – Designated Areas	133
Move to Plane	134
Tutorial – Move to Plane	134
Quick Print	135
Surface Finish	136
Tutorial – Surface Finish	136
Text Style	137
Tutorial – Text Style	137
Assembly Enhancements	138
Introduction	138
Accessory Window	140
Tutorial – Accessory Window	142
Assembly Cuts	145
Combined Views – Assembly Models	146
Tutorial – Combined Views – Assembly Models	147
Component Chooser	148
Copy and Paste	151
Tutorial – Copy and Paste	151
Default Envelope	152

Tutorial – Default Envelope	154
Regular Envelopes	155
Tutorial – Regular Envelopes	157
Exploded Views	160
Tutorial – Exploded Views	162
Failure Resolution – Assembly Models	165
Tutorial – Failure Resolution – Assembly Models	167
Mirror Component Preview	168
Tutorial – Mirror Component Preview	168
Open Generic	169
Tutorial – Open Generic	170
Repeat Command	171
Tutorial – Repeat Command	173
Replace Command	176
Tutorial – Replace Command	177
Restructure Command	179
Tutorial – Restructure Command	180
Save a Copy	181
Tutorial – Save a Copy	181
Shrinkwrap Command	182
Tutorial – Shrinkwrap Command	184
Simplified Reps	186
Tutorial – Simplified Reps	190
Snap Single Constraint	196
Tutorial – Snap Single Constraint	197
Detail Drawing Enhancements	199
Introduction	199
Drawing User Interface	200
The File Menu	201
The Edit Menu	202
The View Menu	203
The Analysis Menu	204
The Info Menu	204
The Drawing Ribbon	205
Tutorial – Drawing User Interface	211
Creating Views	212
Tutorial – Creating Views	212
Drawing Sheets	214
Tutorial – Drawing Sheets	216
The Drawing Tree	218
Tutorial – The Drawing Tree	220
The Model Tree	221
Show Model Annotations	222
Show, Erase, Unerase, and Delete	224
Tutorial – Show Model Annotations	225
Dimension Enhancements	228
Tutorial – Dimension Enhancements	233
Auxiliary Views	238
Tutorial – Auxiliary Views	239
Creating Tables	240
Tutorial – Creating Tables	241

Hole Tables	243
Tutorial – Hole Tables	244
Print and Export Drawings	245
Tutorial – Print and Export Drawings	247
PDF Export Settings.....	248
Customizing the Drawing Ribbon.....	249
Sheetmetal Enhancements.....	250
Introduction.....	250
Flat and Flange Walls	251
Tutorial – Flat and Flange Walls	252
Coordinate Systems.....	254
Tutorial – Coordinate Systems.....	254
Punch Directory.....	255
Tutorial – Punch Directory.....	255
Punch Form Feature	256
Tutorial – Punch Form Feature	258
Quilt Form Feature	260
Tutorial – Quilt Form Feature	261
Flatten Form.....	263
Tutorial – Flatten Form.....	263
Mirror and Pattern Walls	264
Tutorial – Mirror and Pattern Walls	264
Mechanism Enhancements	265
Introduction.....	265
Belt Connections	266
Tutorial – Belt Connections	269
Generic Gears.....	274
Tutorial – Generic Gears.....	275
Spur Gears.....	279
Tutorial – Spur Gears.....	280
Bevel Gears	281
Tutorial – Bevel Gears	282
Worm Gears.....	283
Tutorial – Worm Gears.....	284
Rack & Pinion Gears.....	285
Tutorial – Rack & Pinion Gears.....	286
Slot Motors	287
Tutorial – Slot Motors	287
Piping Enhancements	292
Introduction.....	292
The Edit Menu	293
The Insert Menu	294
The Tools Menu	295
Other User Interface Changes	296
Tutorial – Piping Enhancements	299
Welding Enhancements	303
Introduction.....	303
Insert Menu and Welding Toolbar	304

Weld Standards.....	305
The Tools Menu	306
Weld Materials	307
Weld Processes	308
Weld Preferences.....	309
Weld Preferences Configuration Options.....	312
Fillet Weld.....	313
Groove Welds	315
Plug/Slot Weld.....	319
Spot Weld.....	321
Combine Welds.....	322
Uncombine Welds	323
Convert Welds.....	324
Part Welds.....	325
Weld Annotations	326
Tutorial – Welding Enhancements	328
ISDX Enhancements.....	332
Introduction.....	332
Configuration Options	333
Style Curves.....	334
Style Surfaces	335
Surface Edit Command	336
Surface Knot Analysis	336
Photorender Enhancements	337
Introduction.....	337
Scenes Dialog Box.....	338
Realtime Rendering	339
Perspective Views.....	340
The Perspective Dialog Box.....	341
Configuration File Changes	342
Obsolete Configuration Options	342
Changed Configuration Options.....	342
New Configuration Options	343