

Table of Contents

Introduction and Definitions	1
Objective of This Textbook.....	1
Candid Comments from the Author	2
Textbook Outline	3
Textbook Conventions	5
Supporting Data	5
Definitions and Terminology.....	6
PDMLink and Pro/ENGINEER Object References	14
WT Part	15
Windchill System Architecture.....	17
Windchill Server Requirements.....	18
Windchill PDMLink Administrator Requirements	18
Test and Production Systems	19
Backup and Recovery	19
Installing Oracle.....	20
Introduction.....	20
Prepare for the Oracle Installation	20
Initiate the Installation	21
Oracle Installation Steps	22
Installing Windchill PDMLink	26
Prepare for the Installation	26
Initiate the Installation	27
PDMLink Installation Steps	28
Start/Stop Windchill PDMLink.....	39
Introduction.....	39
Startup Procedure	39
Shutdown Procedure.....	39
Starting/Stopping the Windchill Directory Server	40
Starting/Stopping Apache and Tomcat	41
Starting/Stopping the Windchill Method Server	42
Stop the Windows Service for Tomcat.....	43
Delete the Tomcat Cache	43
Delete the Windchill Cache	43
Windchill Startup/Shutdown Summary.....	44
Context Administration.....	46
Introduction.....	46
Context Specific Configurations	48
Global Configurations.....	49
User Accounts	53
Introduction.....	53
Editing the Site Administrator Account.....	54
Creating Individual User Accounts	56
Importing User Accounts.....	59
Creating the Organization Administrator Account.....	60

Creating a Similar User Account.....	61
Deleting User Accounts.....	63
Personal Cabinets.....	64
Groups.....	65
Introduction.....	65
Creating Groups.....	66
Adding Individual Users to Groups.....	67
Loading Users Into Groups.....	68
Adding Groups to Groups.....	69
Editing Groups.....	70
Groups and Permissions.....	71
Groups at CADquest.....	72
Roles.....	73
Introduction.....	73
Roles and Principals.....	74
OTB Roles.....	75
Managing Roles.....	77
Role Visibility.....	79
Roles Review.....	80
Roles at CADquest.....	80
Products.....	81
Introduction.....	81
Creating a New Product.....	82
Roles, Principals, and Permissions.....	85
Editing the Product's Team.....	86
Product Folders.....	90
Product Specific Object Initialization Rules.....	92
Libraries.....	93
Introduction.....	93
Creating a New Library.....	94
Library Administration Vs Product Administration.....	97
WT Parts and CAD Documents.....	98
Introduction.....	98
WT Part and CAD Document Relationships.....	99
Preference to Auto Associate WT Parts and CAD Documents.....	101
Workspaces.....	104
Introduction.....	104
Enabling Workspaces.....	105
Enabling Workspace Frames.....	106
Creating Workspaces from Windchill.....	107
Register the Server with Pro/ENGINEER.....	108
Creating Workspaces with Pro/ENGINEER.....	110
Activating Another Workspace.....	111
Deleting Workspaces.....	112
Deleting Workspaces with Windchill.....	112
Deleting Workspaces with Pro/ENGINEER.....	113
Deleting the .wf Folder.....	114
PDMLink and Pro/ENGINEER.....	115
Introduction.....	115
Pro/ENGINEER Templates (start parts) and Formats.....	116
Drawing Symbols.....	120

Drawing Tables	122
Drawing Setup Files	123
UDFs	124
Material Definition Files	126
Sheetmetal Bend Tables	128
Purchased or Commercial Items	130
Pro/LIBRARY	131
Pro/ENGINEER Configuration Options	132
Object Initialization Rules (OIRs)	133
Introduction	133
OTB Object Initialization Rules	134
Creating New Object Initialization Rules	135
Folder Rule	138
Life Cycle Rule	140
Team Template Rule	141
Numbering Scheme Rule	142
Versioning Scheme Rule	143
Editing Object Initialization Rules	144
Object Numbering	145
Introduction	145
CAD File Name, CAD Document Name and Number	146
Numbering Schemes	149
Object Initialization Rules for Object Numbering	150
Using Auto Numbering	151
OIR Constraints for Numbering	151
Disabling Auto Numbering	153
Disabling Auto Numbering for WT Parts	154
Adding a Prefix and/or Suffix to Auto Numbering	155
Object Numbering Preferences	156
Object Numbering Review	159
Object Numbering at CADquest	160
Object Versioning	161
Introduction	161
Object Versioning, States, and Life Cycle Options	162
Revision Schemes	163
Editing the Revision Scheme .xml File	164
Loading the Revision Scheme .xml File	166
Adding Seed Names to the Life Cycle Dialog Box	167
Object Initialization Rules for Object Revisioning	169
Specifying the Revision Scheme	170
Iteration	170
Changing the Iteration Starting Value	171
Object Versioning Review	172
Object Versioning at CADquest	173
Object Types	174
Introduction	174
OTB Object Types	175
Behavior of OTB Object Types	176
Document and Reference Document	177
Relationships Between Object Types	178
Customizing Object Create Wizards	179

Type and Attribute Manager	182
Introduction.....	182
Creating/Editing Attribute Definitions	183
Creating/Editing Object Types	185
Attribute Definitions and Object Types at CADquest.....	186
Associating Attribute Definitions with Object Types.....	187
Attribute Constraint Types.....	190
Preferences for Object Types	191
Customizing Attribute Handling.....	192
The AllClients.xml File Syntax.....	194
States	196
Introduction.....	196
Object Versioning, States, and Life Cycle Options	197
OTB States.....	198
Managing States	199
States Review	201
States at CADquest.....	201
Life Cycles	202
Introduction.....	202
Object Versioning, States, and Life Cycle Options	203
Life Cycle Types.....	204
Basic Life Cycles	204
Advanced Life Cycles	204
Life Cycle Transition Options	205
Set State	206
Promote	207
Lock	208
Revise	209
Change	210
Refine and Review.....	210
Managing Life Cycle Transitions Options	211
Life Cycle Diagram	213
Completed Life Cycle Diagram	216
The Life Cycle Administrator	218
Creating a New Basic Life Cycle.....	222
Reordering Life Cycle States	230
Life Cycle Iterations.....	231
Object Initialization Rules for Life Cycles.....	232
Life Cycle Templates.....	233
Life Cycles at CADquest	234
Teams	235
Introduction.....	235
The Team Administrator.....	236
Creating a Team	237
Object Initialization Rules for Teams	239
Team Templates	240
Workflows	241
Introduction.....	241
Workflow Diagram Example.....	243
The Workflow Administrator	244
The Workflow Editor.....	248
The Process Manager.....	249
Workflow Tutorial	251

Promotion and Change Process	312
Introduction.....	312
Life Cycle Diagram	313
The Promotion Process.....	314
Promotion Request Approval Process	314
Promotion Request Review Process	315
Creating a New Promotion Process	316
Promotion Preferences	317
Deleting Promotion Preferences	318
The Change Process	319
Creating a New Change Request	321
Promotion and Change Process Example	322
Access Control Lists	325
Introduction.....	325
Permissions Domains	327
Creating a Permissions Domain	327
Associating a Folder With a Permissions Domain	330
Object Types and States for Permissions	335
Principals.....	337
Roles, Principals, and Permissions.....	338
About Permissions	339
Disabling Implied Permissions	341
Permissions Vs User Actions	342
Permissions Required for the "Move" User Action.....	345
Creating Access Control Rules	347
CAD Document Templates	349
Introduction.....	349
Creating a CAD Document Template	350
CAD Document Template Preference	352
CAD Document Template Visibility	353
Using a CAD Document Template	354
Document Templates	355
Introduction.....	355
Creating a Document Template With Content	356
Creating a Document Template Without Content	357
Creating a Reference Document Template With Content	358
Creating Product or Library Specific Document Templates.....	359
Document Template Preferences	360
Enable/Disable Document Templates.....	361
Document Template Visibility.....	363
Using a Document Template.....	364
Product and Library Templates	365
Introduction.....	365
Creating a Product Template	366
Creating a Library Template.....	369
Product/Library Template Visibility.....	372
Baselines	373
Introduction.....	373
Object Initialization Rules for Baselines.....	374
Packages	375
Introduction.....	375

Enable Packages	376
Object Initialization Rules for Packages.....	377
Object Initialization Rules for Delivery Records.....	377
Preferences for Packages.....	378
Packages Review.....	378
Profiles	379
Introduction.....	379
OTB Profiles	380
Profile Actions	381
Creating a New Profile	386
Profiles Review	391
Best Practices for Profiles	391
Preferences	392
Introduction.....	392
Recommended Preferences	393
Editing and Locking Preferences	394
Delete Child Instances	397
Complete Preferences List.....	398
User interface Customizations.....	399
Introduction.....	399
Replacing the Splash Screen Logo.....	400
Creating Messages	401
Replacing the Windchill PDMLink Banner Logo	402
Toolbar Icon Description Display	403
Windchill Shell	405
Introduction.....	405
Using the Windchill Shell.....	406
The Enumcustomize Utility	407
Introduction.....	407
Using the Enumcustomize Utility	408
Managing Windchill Properties with xconfmanager.....	409
Introduction.....	409
xconfmanager Command Syntax.....	410
Using the xconfmanager Command	413
WT Custom and WT Safe Areas	415
Introduction.....	415
Safe Area Folder Structure	416
Ant Script for Safe Area Management	417
Email Server Setup.....	419
Introduction.....	419
Configuring the SMTP Server	420
SMTP Server Authentication.....	420
Setting the Sender Email Address	421
Setting the Administrators Email Address List	421
Queue Manager.....	422
Introduction.....	422
Queue Entry Status.....	423
Regular Background Queue Maintenance.....	423
Managing Queue Entries	423

Reports	425
Introduction.....	425
OTB Reports	425
Legacy Reports	426
The Report Manager	427
Creating Query Builder Reports	428
Editing Report Visibility	429
Updating Report Tables	430
Reports Tutorial.....	431
Security Audit Reports.....	447
Introduction.....	447
Create and Save Security Audit Report Queries	448
Events That Can Be Audited.....	450
Enable Events for Auditing.....	452
Saved Security Audit Report Queries	454
Audit Log Purge Manager	455
Other System Tools.....	456
Introduction.....	456
Force Content to Vault	456
Redirecting Vaults to Mass Storage Hardware	457
The Windchill Diagnostic Utility	459
Windchill Visualization Overview	461
Introduction.....	461
Windchill Visualization – How it Works	464
ProductView Client.....	465
Introduction.....	465
Pre-Install the ProductView Client	466
Download and Install the ProductView Client	473
ProductView Client Options	476
ProductView Adapters	478
Introduction.....	478
Install the ProductView Adapters	479
Configure the ProductView Adapters.....	484
Pro/ENGINEER Adapter Configuration	484
Thumbnail Generator Adapter Configuration.....	489
Documents (Office) Adapter Configuration.....	492
Published Document Example	497
Creating the Worker Daemon Windows Service.....	498
Removing the Worker Daemon Windows Service	498
Managing Worker Agents	499
Introduction.....	499
Creating a Pro/E Worker Agent – Scenario #1	500
Creating a Pro/E Worker Agent – Scenario #2	502
Creating a Thumbnail Worker Agent – Scenario #1	505
Creating a Documents Worker Agent – Scenario #1	507
ProductView Watermarks	509
Introduction.....	509
Install the Watermark Editor.....	510
Using the Watermark Editor.....	514
Watermark Labels	516
Watermark Parametric Text	517

Watermark Images.....	519
Watermark Examples.....	520
Watermark Mapping.....	521
Loading the Watermark Configuration into Windchill.....	526
Thumbnails	529
Introduction.....	529
The Thumbnail Navigator.....	531
Thumbnail Configuration.....	532
Thumbnail Model Orientation	532
Thumbnail Background Color.....	533
Thumbnail Size	534
Thumbnail Generation	534
WVS Post-Installation Activities	535
Windchill Visualization Services Authorization.....	535
Testing the Configuration of Windchill Visualization Services	537
Events that Trigger Automatic Publication	543
Disable Automatic Publication After Check In.....	543
Automatic Publication After Check In.....	544
Publish Monitor	546
Publishing Statistics	548
Publishing Pro/ENGINEER Assemblies	549
Assembly Publishing.....	549
Publishing as Positioning Assembly.....	551
Publish as Extended Positioning Assembly.....	553
Publishing Components of Positioning Assemblies	554
Publish and Thumbnail Control	556
Publish Schedule Administrator.....	558
Uninstalling Windchill and Oracle	561
Introduction.....	561
Uninstall Procedure.....	561
Reference Topics Collection	563
Introduction.....	563
Simultaneous Windchill Logins	563
Remote Desktop for Windows XP.....	564
Clearing the Java Cache.....	567
Clearing the Windchill Cache.....	569
Clearing the "Sticky Info" for the Windchill Browser.....	570
Creating a New Oracle Database Sequence.....	571
Setting Pro/ENGINEER Configuration Options.....	574
Creating Pro/ENGINEER Mapkeys.....	575
Verifying Pro/ENGINEER Family table Instances.....	575
The CADquest Windchill Resource Page	576
About the Author	576